

iriver

Instruction Manual

H10 Jr.

iriver
www.iriver.com



MP3
DIGITAL AUDIO

FM
TUNER

Play
Windows Media

SRS **WOW** **REC**
DIGITAL VOICE
recorder

Firmware Upgradable™

Thank you for your purchase.
Please read this manual carefully before using your new player.

Table of contents



⚙ Before using the product

Welcome	
iriver web site	
Copyrights/Certification/Trademarks/Limited Liability	1
Precautions and Safety	2

⚙ Chapter 1 | Getting started

Features of the H10	8
Components	10
Locating the controls	11
LCD screen display	13
Connecting the product	16
Installing the software	22

⚙ Chapter 2 | Quick start

Turning on / off the player and playing music	24
Controlling volume and changing modes	25

⚙ Chapter 3 | Basic operation

Playing music	28
Playlist function	34
Download Music & Playlists	35
Listening to FM radio	37
Recording	42
Viewing images	47
Viewing text	49
Browser function	52

⚙ Chapter 4 | Useful features

Settings Menu	54
Settings menu navigation	55
Menu settings	57

⚙ Chapter 5 | Additional information

Troubleshooting	74
-----------------	----

⚙ Chapter 6 | Appendix

Specifications	78
FCC	79



Welcome

Thank you for purchasing the iriver H10.
Your new player delivers a combination of style and features you can't find anywhere else.
This instruction manual is designed to help you use the iriver H10 properly.
It is important that you read the manual to ensure that you get the most out of your new player.
Thank you.

iriver web site



www.iriver.com

Obtain information about your player, look for updates, and find answers to questions at our web site.

Use the firmware (system software) upgrade function of our products from the site to continuously improve the product performance.

Get the online support and check the FAQs.

Register your iriver product online so that our Customer Service is able to provide support as efficiently as possible.

In addition, you can get updated news including new products, firmware upgrade and various events by e-mail.



Copyrights/Certification/Trademarks/Limited Liability

Copyrights

iriver Limited has all the rights of the patent, trademark, literary property and intellectual property related to this manual. You may not copy or reproduce any part of this manual unless authorized by iriver Limited. You can be punished by using any part of this manual illegally.

The software, audio and video which have an intellectual property are protected by copyright and international laws. It is user's responsibilities when he/she reproduce or distribute the contents created by this product.

The companies, institutions, products, people and events used in examples are not real data. We don't have any intention to be related with any companies, institutions, products, people and events through this manual and should not draw inferences. Users are responsible for observing the copyrights and intellectual properties.

© 1999~2005 iriver Limited. All rights reserved.

Certification

CE, FCC, MIC

Trademarks

Windows XP and Windows Media Player are the registered trademarks of Microsoft Corp.

Limited Liability

Neither the Manufacturer, importers nor dealers is responsible for any accidental damage including bodily injury or any damage resulting from misuse or unsuitable operation by you.

The information on this manual is prepared with the current player specifications. The manufacturer, iriver Limited, is adding new features to the product and may persistently apply new technologies hereafter.

All standards may be changed at any time without notice.



Precautions and Safety

Please read the notices before using for your safety.

Electricity

Do not overload a single power circuit.

Overheating or fire can result.



Do not kink or crease the power cable or place heavy objects on the power cable.

Fire can result from damaged power cables.



Do not handle power plug and adapter with wet hands.

Electrical Shock may result.



Firmly plug the adapter into the wall socket.

Fire can result from improper use.



Unplug the AC adapter during electrical storms.

Electrical Shock may result.



Use only the supplied AC adapter. Use of unauthorized power adapters is not recommended.

Electrical Shock may result.



Unplug adapter when it's not in use.

Overheating or fire can result.



Immediately power off the player and unplug the AC adapter if water or other liquids are present.

Fire can result from improper use.



Immediately power off the player and unplug the AC adapter if smoke or odors emit from the player or adapter.

Fire can result from improper use.



Precautions and Safety

Please read the notices before using for your safety.

Product

Do not place heavy objects on the device.

Damage to your player may result from improper use.



Keep away from harsh environments including humid, dusty, and smoky areas.

Damage to your player may result from improper use.



Avoid contact with water and other liquids.

Damage to your player may result.



Do not use water or chemicals to clean the player. Clean the surface with a soft cloth.

Damage to your player may result from improper use.



Do not clean with chemical or detergent.

Damage to your player may result from improper use.



Do not use excessive force on the buttons or attempt to disassemble the device.

Damage to your player may result from improper use.



Keep out of direct sunlight and extreme heat and cold.

Damage to your player may result from improper use.



Do not drop or subject the device to impact.

Damage to your player may result from improper use.





Precautions and Safety

Please read the notices before using for your safety.


Keep the player away from strong magnets.

Damage to your player may result from magnets such as CRT, TV, monitor and speaker.



Do not disassemble or modify.

Damage to your player may result from improper use.

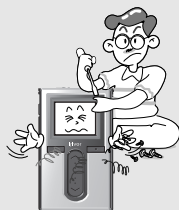

Do not dry the product with heater or microwave.

Damage or severe injury may result from improper use.



When you upload or download files using USB cable, do not disconnected the USB cable suddenly or turn it off.

Data in product can be damaged.



Data can be damaged because of physical impact, lightning and power failure.

Users are responsible for creating backup data and iriver Limited is not responsible for any damaged data.



Precautions and Safety

Please read the notices before using for your safety.

Others

Do not use headphones / earphones while cycling, driving, or operating any motorized vehicle.

It is dangerous and is illegal in some areas.



Reduce volume while walking, especially at pedestrian crosswalk.



Do not use headphone / earphones at high volume.

Hearing experts advise against listening to continuous, loud and extended play.



Reduce volume or stop using the player if you experience a ringing in your ears.

Hearing experts advise against listening to continuous, loud and extended play.




Do not use at high volume for continuous listening.

Hearing experts advise against listening to continuous, loud and extended play.



Keep headphone/earphone cords under control to avoid getting caught on various objects.





Chapter 1 | Getting started

Features of the H10	8
Components	10
Locating the controls	
H10 Player	11
Cradle	12
LCD screen display	
LCD screen display	13
MUSIC screen	14
FM RADIO screen	15
RECORDING screen	15
Connecting the product	
Connecting PC - Connecting cable	16
Connecting PC - Disconnecting cable	17
Connecting the power - connecting the adapter(player)	18
Connecting the power - connecting the adapter(cradle)	19
Connecting earphone	19
Connecting the cradle	20
Connecting the cradle - Connecting PC	20
Connecting the cradle - Line-in connection	21
Connecting the cradle - Line-out connection	21
Installing the software	
Installing the WMP 10	22



Features of the H10

1 Color icons, color menus – Adopted 260,000-color 1.2" LTPS (Low Temperature Poly Silicon) LCD

The 1.2-inch, 260,000 color LTPS (Low Temperature Poly Silicon) LCD shows off an exciting new visual interface that makes it easy to navigate through your music.

2 Convenient ID3 tag database

Searching with the ID3 tag database enables you to select the music file by artist, album or genre.

3 Familiar software (Windows Media Player 10)

The intuitive software makes it easy to manage all of your music.

4 Faster file transferring – Supporting USB 2.0 interface

USB 2.0 supports transfer rates up to 480Mbps.

5 Firmware upgradeable

Firmware upgrades keep your player up to date.



Features of the H10

6 Photo and text viewer

View digital photos or text files on the player's color screen.

7 Enhanced 3D sound

SRS WOW sound effect technology provides rich bass sound and dynamic 3D sound effect.

8 Customizable EQ settings

10 preset EQs to choose from and a custom user EQ.

9 FM radio and recording (Option - Some H10 models do not support FM radio.)

Listen to FM radio using the automatic scanning and channel memory functions. You can also record the FM broadcast while you listen.

10 Easy to use touch scroll

Navigating through your music is easy using convenient touch strip scrolling.



Components

Accessories subject to change without notice and may vary from image shown.

H10 Player



Instruction Manual I
Warranty Card I
Quick Start Guide




Earphones



Installation CD



Cable

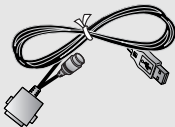


Neck Strap



Locating the controls

Actual player may vary slightly from images shown.

H10 Player

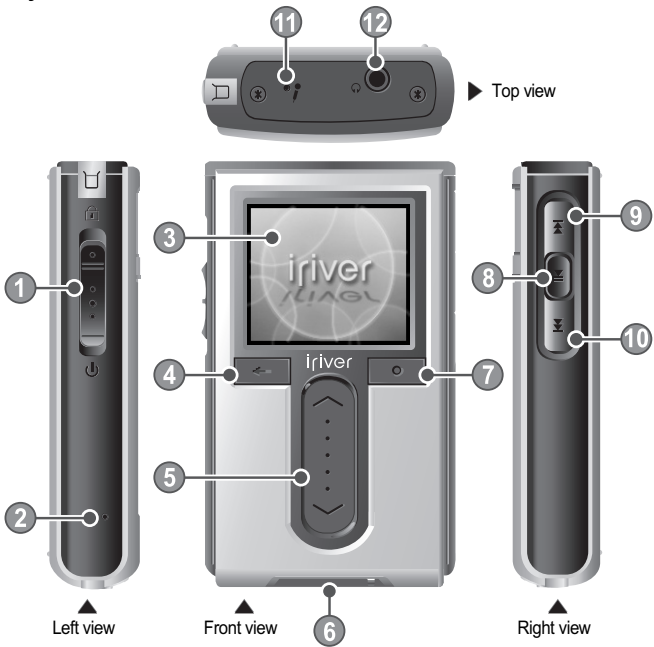


1	HOLD / Power ON/OFF switch	7	Select button
2	Reset button	8	Play / Pause button
3	LCD screen	9	Previous button
4	Cancel button	10	Next button
5	Up / Down scroll button	11	Built-in microphone
6	USB / Adapter jack	12	Earphone jack

Optional Accessories

Cradle / USB cable and Line-In/Out cable



AC Adaptor




Carrying Case



Cradle (Cradle is an optional accessory.)

► Back view

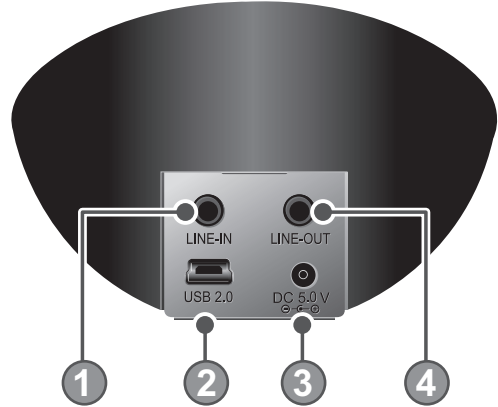

LCD screen display - Some H10 models do not support FM radio.

Menu

Note

- : MUSIC
- : FM RADIO
- : RECORDING
- : PHOTO
- : TEXT
- : BROWSER
- : SETTINGS


Note

Menu Examples

1	Line in jack	3	DC 5.0 V jack
2	USB 2.0 jack	4	Line Out jack

LCD screen display

MUSIC screen

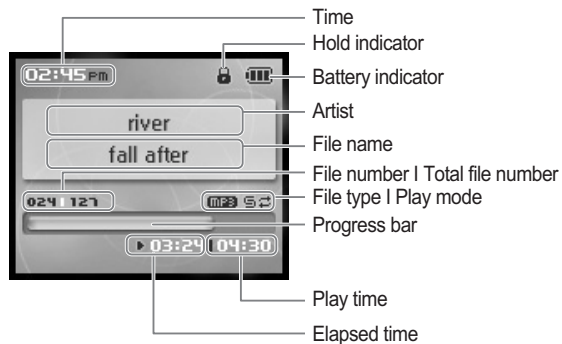

Note

■ The following icons are displayed to indicate the type of file playing.



: MP3



: WMA




: ASF




: OGG

LCD screen display

FM RADIO screen - Some H10 models do not support FM radio.

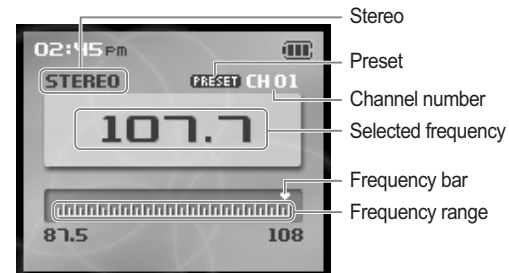


RECORDING screen

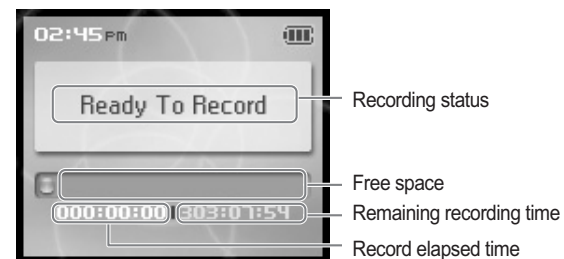

Connecting the product

Connecting PC – Connecting cable

- 1 Connect the included USB cable to the port on the H10 then to an open USB port on your computer.

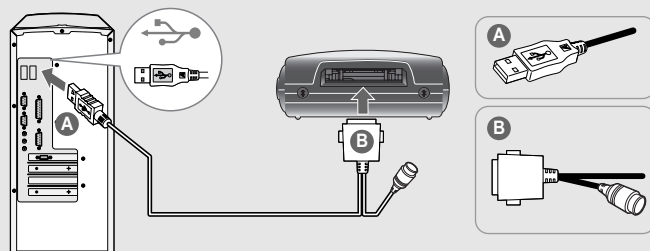


- 2 Power on the player by pressing the [] button. The LCD screen will display <USB Connected>.



- 3 Windows may show "Found New Hardware" when the player is first attached.



- 4 The H10 will display as a new device under My Computer.

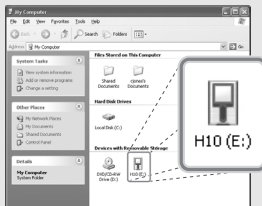

- 5 The H10 is now installed and working properly. Please see Page 35 for instructions on getting music onto the player.


Connecting the product

Connecting PC – Disconnecting cable



- 1 Click the icon on the system tray.



- 2 Click the popup message as shown below.



- 3 When the "Safe To Remove Hardware" popup window appears, click the [OK] button and disconnect the USB cable from PC.

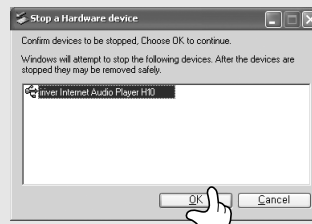

Note

- The tray icon may be hidden in some Windows XP operating system settings. Click the "Display hidden icon" to view the hidden icon.
- While some applications such as Windows Explorer or Window Media Player are running, the "Safe to Remove Hardware" function may not be performed. Close all running applications first.
- In some Windows XP operation system settings, hardware safe removal is temporarily unavailable due to some internal system communication. Wait for a moment and try it again.


Connecting the product

Be sure to use the supplied AC adapter to connect the cable to the player.

Connecting the power – connecting the adapter (player)

(AC adapter is an optional accessory.)

1. Connect the supplied cable to the player.
 2. Connect the AC adapter to the DC jack on the cable.
 3. Connect the AC adapter plug to a power socket.
- AC adapter for this product is 220V/50Hz.

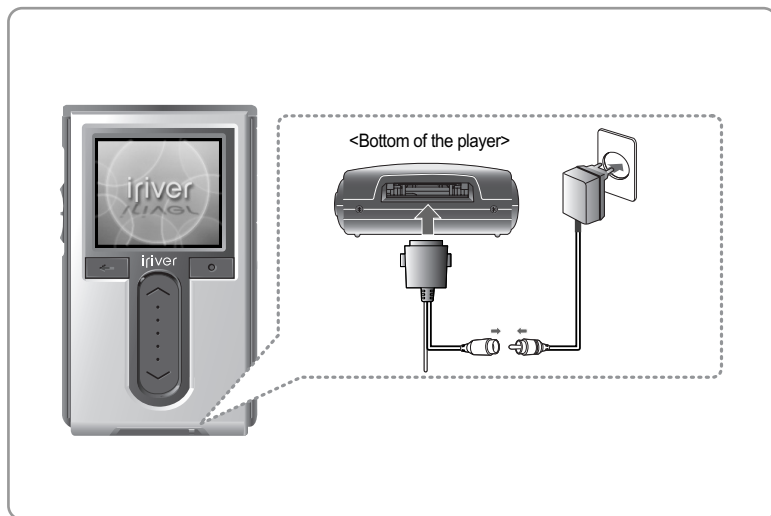

Note

- If a power source is connected, the charging indicator on the DC jack will illuminate. (The charge indicator will dim after charging is complete.)


Connecting the product

Be sure to use the supplied AC adapter to connect the cable to the player.

Connecting the power – connecting the adapter (cradle)

(Cradle and AC adapter is an optional accessory.)

1. Put the player into the connection terminal of the cradle.
2. Connect the AC adapter to the cradle's 5.0V DC connector.
3. Connect the AC adapter plug to a power socket.

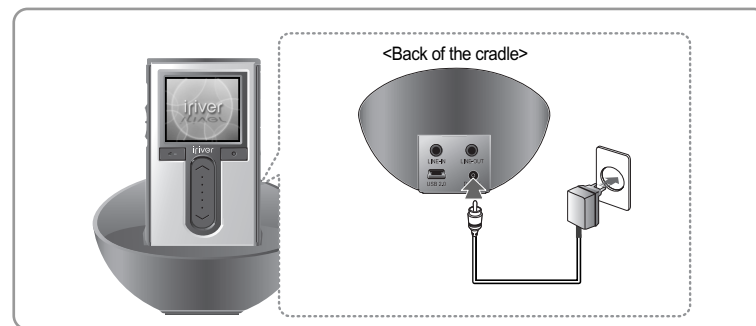


Note

- The LED light starts blinking when charging starts, and stays on when charging is done.

Connecting earphone

1. Connect the earphone to the jack on the top of the player.

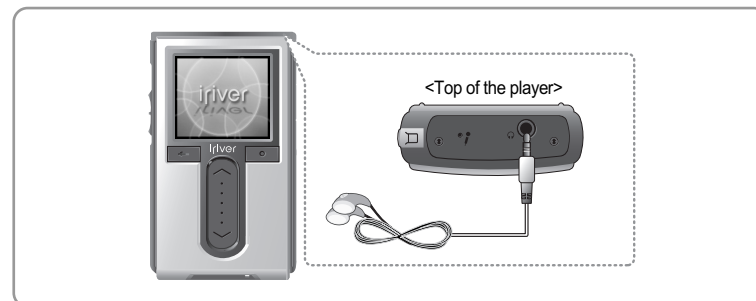

Connecting the product

Connecting the cradle

(Cradle is an optional accessory.)


1. Put the player into the connection terminal of the cradle.



Connecting the cradle – Connecting PC

(Cradle is an optional accessory.)

1. Put the player into the connection terminal of the cradle.
2. Connect the USB 2.0 jack of the cradle to a PC with USB cable.
(USB cable is an optional accessory.)

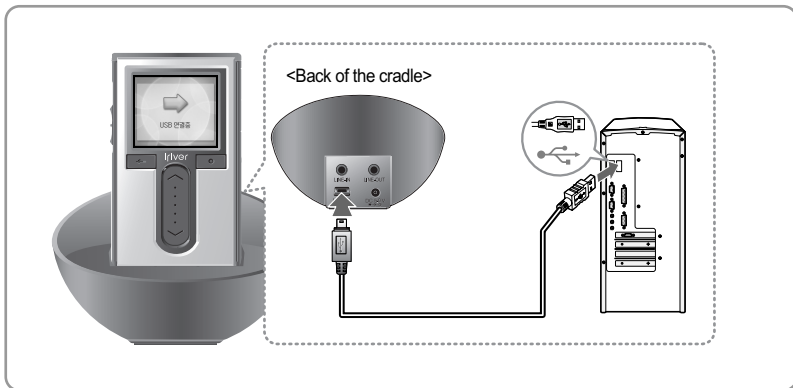


Connecting the product

Connecting the cradle – Line-In connection

(Cradle is an optional accessory.)


1. Put the player into the connection terminal of the cradle.
2. Connect the Line-in jack of the cradle to the Line-out (or earphone) jack of an external device with a Line-in/out cable. (Line-in/out cable is an optional accessory.)

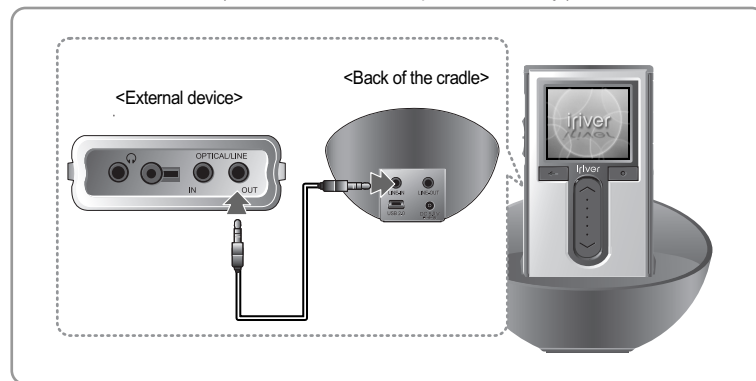

Connecting the cradle – Line-out connection

(Cradle is an optional accessory.)

1. Put the player into the connection terminal of the cradle.
2. Connect the Line-out jack of the cradle to the input jack of a speaker with a Line-in/out cable. (Line-in/out cable is an optional accessory.)

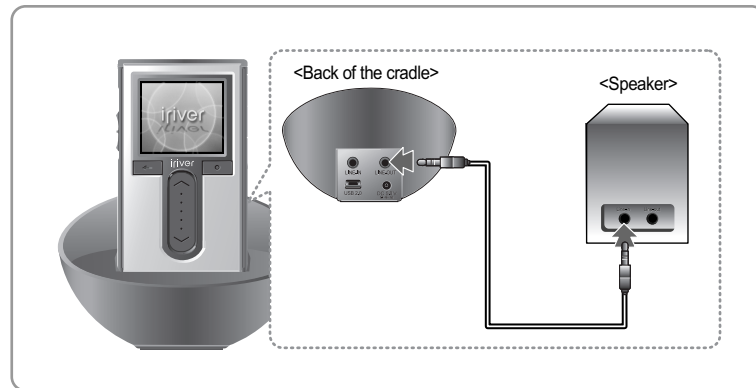

Installing the software

🔧 Installing the WMP 10

1. The program installation process will start automatically after inserting the Installation CD to the PC's CD-ROM drive.
Click the [OK] button and follow the on screen instructions which appear as each window.



PLUG USB FOR YOUR DIGITAL EXPERIENCE

🔧 Chapter 2 | Quick start

Turning on/off the player and Playing music	24
Controlling volume and changing modes	25

Turning on/off the player and playing music

Note

- Button image with white background = Press the button quickly.
Button image with black background = Press and hold the button.

Turning on/off the player



1 Turning on the player

Press the [] button to downward.
The initial screen will be displayed.



Note


- If there is no operation after pressing the button, check whether the battery is discharged or not.



1 Turning off the player

Press and hold the [] button to downward.
The player will be turned off.

Playing music



1 Select the <MUSIC> mode using the [] scroll and press the [] button when the main screen appears.




2 After finding the music and press the [] button to play it.

- : Plays the selected title



Controlling volume and changing modes

Controlling volume




1 Use the [] scroll to control volume during playback.

- ↑ : Volume up
- ↓ : Volume down




Changing mode - Some H10 models do not support FM radio.




1 Select the mode using the [] scroll when the main menu appears.

There are 7 modes including MUSIC, FM RADIO, RECORDING, PHOTO, TEXT, BROWSER, SETTINGS.

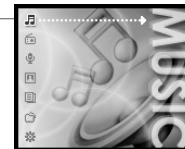

Note

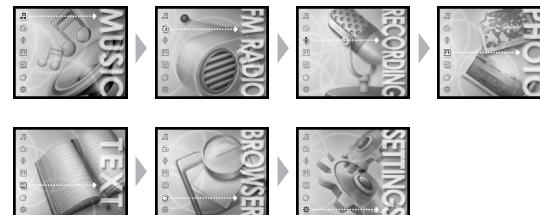

2 Press the [] button to enter the desired mode.



3 If you press and hold the [] button in any screen, you can return to the main menu.

Note

- While recording, stop recording first, then press and hold [] button to return to the main menu.



Chapter 3 | Basic operation

Playing music	
Playing music	28
Setting up the Play mode	32
Playlist function	34
Auto Sync function	35
Listening to FM radio	
Listening to FM radio	37
Scanning FM radio frequency - Manual search	38
Scanning FM radio frequency - Auto Scan	38
Storing FM radio station - Manually	39
Storing FM radio stations - Automatically	39
Scanning FM radio frequency - PRESET feature	40
Erasing FM radio station	41
Recording	
Recording Voice	42
Line-in recording	43
Recording FM radio station	45
Notices for recording	46
To delete a recorded file	46
Playing the recorded file	46
Viewing images	
Viewing image file	47
Getting images on the player	48
Viewing text	
Viewing text file	49
Getting text files on the player	51
Browser function	
Browser function	52

Playing music

Playing music

1 Press the [] button downward to display the main screen.

2 Select the <MUSIC> mode using the [] scroll from the main menu.

3 Press the [] button to display the Search screen.

Note

- In case of selecting <Artists>
Select "Artists – Albums – Titles" to search titles.
- In case of selecting <Albums>
Select "Albums – Titles" to search titles.
- In case of selecting <Genres>
Select "Genres - Artists – Albums – Titles" to search titles.
- In case of selecting <Titles>
Select "Titles" to search titles.
- In case of selecting <Playlists>
(Refer to page 34.)

Playing music

4 Use the [] scroll the select the item.
Example: In case of selecting <Titles>

[] : Press it to move to the desired item.
[] : Moves to the desired item.
[] : Press to return to the previous screen.
[] : Press and hold to return to the main menu.

5 Press the [] button after selecting the title to play it.
During playback, press the [] button to pause playback. Press it again to resume playback.

6 Use the [] scroll to control volume during playback.
 : Volume up
 : Volume down

Note





Playing music




7

Playing previous/next title

Press the [◀▶] button during playback to play previous / next title.

- ◀▶ : Plays previous file
- ▶▶ : Plays next file

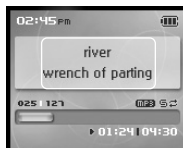


8

Fast-forward / Fast-reverse

Press and hold the [⏮/⏭] button during playback for fast-forward or fast-reverse playback.

- ⏮ : Fast-reverse
- ⏭ : Fast-forward


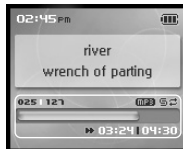


Playing music




9

Press the [○] button during playback to display the EQ selection screen.

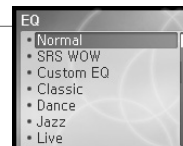

10

Select the EQ using the [↑/↓] scroll and press the [○] button.

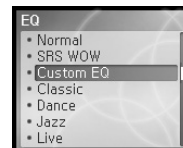


Note

- EQ consists of SRS and 10 Preset EQ.
- To customize SRS and Custom EQ, use the <Sound> menu. (Refer to page 57.)
- SRS uses a combination of Field Width, TruBase, FOCUS and Freq. Boost to enhance sound.
- Custom EQ will be automatically selected after adjusting Custom EQ settings in the <Sound> menu.



11

Press and hold the [●] button during playback to display the MY Rating screen.



12

Select the desired Rating using the [↑/↓] scroll and press the [○] button.



Note

- In the <BROWSER> mode, this function is not available.

Playing music

Setting up the Play mode

Various Play modes can be used during playback.

1 Select the <SETTINGS> mode using the [/> scroll when the main screen appears.

2 Press the [] button to display the SETTINGS list screen.

3 Select <Sound> using the [/> scroll and press the [] button to display the <Sound> list screen.

4 Move to the <Play Mode> using the [/> scroll.

5 Press the [] button to display the <Play Mode> list screen.

Playing music

6 Select the desired Play mode using the [/> scroll and press the [] button to setup the Play mode.

Note

■ The Play mode consists of following options.

- : **Repeat**
Plays all titles in the selected category repeatedly.
- : **Repeat 1**
Plays a selected title repeatedly.
- : **Shuffle**
Randomly plays all titles in the selected category and stop.
- : **Shuffle + Repeat**
Randomly plays all titles in the selected category repeatedly.

Playlist function

What is Playlist

"Playlist" is a list of the titles that enables you to manage the titles or other audio files. Now you can play the music at any time and any place. Playlist in WMP is able to sync with H10.

Note

■ In case of selecting <Playlists>

- My Rating
Plays titles in designated rating order.
- My Favorites
Plays titles by playback frequencies.
- Recently Played
Plays titles in recently played order.
- My Playlist
Listen to playlists synced from Windows Media Player.
- Quick List
User programmable on-the-fly playlist.
To load the Quick List:
Locate a title using the <MUSIC> menu.
Press and hold [●] to add it to the Quick List.
'Added Quick List!' will be displayed.
Repeat to add more titles to the Quick List.
Use the <Playlists> menu to see the Quick List.
Press [○] button to play it!
(When in Browser mode, you cannot add an item to the Quick List.)



Download Music & Playlists


Get the last Windows Media Player

In order to copy music & playlists to your player, you must use Windows Media Player 10. The installation CD-ROM should include the proper version of Windows Media Player.

Windows Media Player 10 can also be found online at :
www.microsoft.com/windowsmedia/download/


Please note, purchased music can only be copied to this player using Windows XP and the latest version of Windows Media Player.

1 Connect the USB cable to the USB port on the player and to your PC.

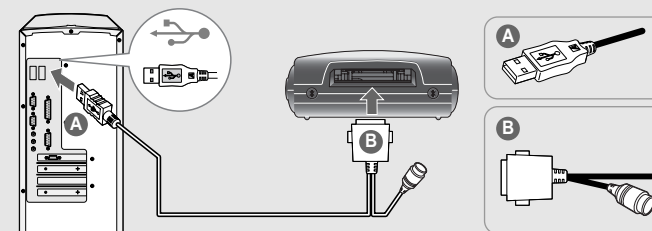

2 Open Windows Media Player.

- a. Click Start - All Programs - Accessories - Entertainment - Windows Media Player.
- b. Click "Library" from the menu button near the top of the screen.
Most of your music should be listed in this library.
If not, check Windows Media Player help for more information about the library.

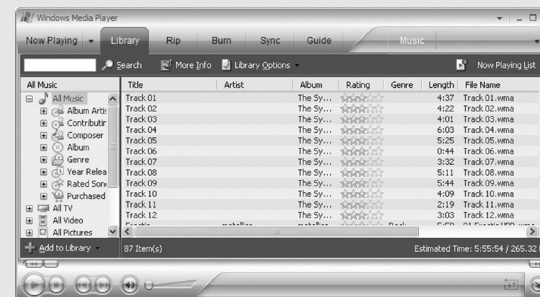



Download Music & Playlists


3

Locate a Songs & Playlists in the Library and Right-Click on it. Select "Add to - Sync List". A "Sync list" will appear on the right side of windows Media Player listing all the Songs & Playlists to be added to your player. Repeat for all the Songs & Playlists you would like to add to your player.




4

Click the "Sync" menu button. On the right side the Sync screen choose the H10 from the download list.

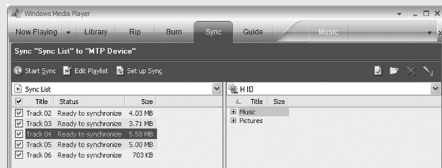

5

Click Start Sync to transfer the items on your Sync list to the player. A progress indicator will show each file transferring. When complete, copied songs will appear in the "Synchronized to Device" list on the left side of Windows Media Player and in the specified folder on the right side of the screen. Disconnect the player from your computer and enjoy your music!

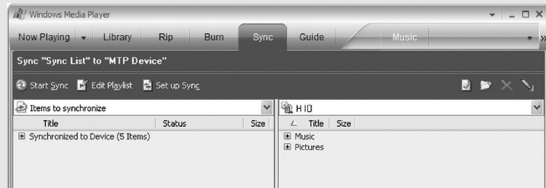


If you prefer to Auto Sync, please select "Auto Sync" in the menu of Set Up Sync. You can download music & playlists.



Listening to FM radio

Some H10 models do not support FM radio.

Listening to FM radio



1

Select the <FM RADIO> mode using the [↑/↓] scroll from the main menu.



2


Press the [○] button to switch to the FM Radio.



3

Setup the Preset by pressing the [▶] button and press [◀/▶] button to select an FM station.

◀ : To previous station
▶ : To next station



4

Use the [↑/↓] scroll to control volume during listening to FM radio.



Note

- In areas where the signal is weak, some channels may be unavailable or reception may be poor.

Listening to FM radio

Some H10 models do not support FM radio.

Scanning FM radio frequency – Manual search

1 If <PRESET> is displayed, press the [▶] button to disable "Preset" mode, and press the [◀/▶] button to increase/decrease the frequency.

◀ : Decreases by 0.1 MHz
▶ : Increases by 0.1 MHz

Listening to FM radio

Some H10 models do not support FM radio.

Storing FM radio station - Manually

1 If <PRESET> is displayed, press the [▶] button to disable "Preset" mode, and press the [◀/▶] button to increase/decrease the frequency.

◀ : Decreases frequency
▶ : Increases frequency

2 Press and hold the [▶] button.

If all 20 available channels are filled, the station will not be stored.

Note

- Up to 20 channels can be stored.
- Once all 20 channels are filled, new stations can not be stored. Please refer to page 41 to delete a station before storing another.

Scanning FM radio frequency – Auto Scan

1 If <PRESET> is displayed, press the [▶] button to disable "Preset" mode and press and hold [◀/▶] button to Scan for the previous/next available station.

◀ : Moves to the previous available station
▶ : Moves to the next available station

Note

- If the Preset it set to ON, the AUTO SCAN function cannot be used.

Storing FM radio stations - Automatically

<Auto Preset>will program up to 20 stations automatically in the 20 channels.
The <Auto Preset> function can be set in <SETTINGS> - <Extra> - <Auto Preset>.

1 If the <Auto Preset> screen appears, move to [Yes] using the [↑/↓] scroll.

2 Press the [○] button.

The tuned stations will be stored one by one.

Note

- In areas where the signal is weak, some channels may not be stored.

Listening to FM radio

Some H10 models do not support FM radio.

Scanning FM radio frequency – PRESET feature

1
 If <PRESET> is not displayed, press the [▶||] button to enable "Preset" mode.

2
 Press the [◀◀/▶▶] button to move to previous/next Preset station.
 ◀◀ : Moves to previous Preset station
 ▶▶ : Moves to next Preset station

Note

■ Only stored Preset stations can be selected.

Listening to FM radio

Some H10 models do not support FM radio.

Erasing FM radio station

1
 If <PRESET> is not displayed, press the [▶||] button to enable "Preset" mode, and press the [◀◀/▶▶] button to select a stored station.

2
 Press and hold the [▶||] button.
 The selected station will be erased and the next station will be displayed.
 Press and hold the [▶||] button again to erase the next station.

Note

■ If all channels are deleted, PRESET mode will be disabled until another station is stored.

Recording Voice

↑
○
↓

1

Select the <RECORDING> mode using the [↑/↓] scroll from the main menu.

○

2

Press the [○] button to display the Recording Source screen.

↑
○
↓

○

3

Move to <Voice> using the [↑/↓] scroll and confirm it by pressing the [○] button.

○

4

Press the [○] button to start recording.

○

5

Press the [○] button to stop recording.

Note

- Volume control is not available while recording.
- Keep player at least 12 inches from the recording source to avoid distortion.
- You can change the voice setting in the <Voice Setting>menu. (Refer to page 60.)

Line-in recording is only available using the optional cradle.

Line-In recording

1

After connecting the player and cradle, connect the cradle's Line-In jack to the Line-Out (or earphone) jack of an external device using the Line-In/Out connection cable.

↑
○
↓

2

In the Recording Source screen, move to <Line-In> using the [↑/↓] scroll and confirm it by pressing the [○] button.

↑
○
↓

○

river

43

Recording

○

3

Begin playback on the source.
Then press the [○] button to start recording.

○

4

Press the [○] button to stop recording.

Note

- Volume control is not available while recording.
- You can change the recording quality and volume in the <Line-In Setting> and <Line-In Volume> menus. (Refer to page 61.)

Recording

Some H10 models do not support FM radio.

Recording FM radio station

1

Select the <FM RADIO> mode using the [↕] scroll from the main menu.

○

2

Press the [○] button to switch to Radio mode.

●

3

Press and hold the [●] button to record radio broadcasting while listening.

○

4

Press the [○] button to stop recording.

Note

- Volume control is not available while recording.

Recording


Some H10 models do not support FM radio.

Notices for recording


Note

- Recording is automatically stopped if :
 - The player's memory is full.
 - The battery is low.

To delete a recorded file



- Go into the <My Recordings> folder in the Browser mode. Select the file you want to delete using [↑/↓] scroll, then press and hold [●] button to delete the selected file.

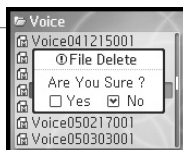

Playing the recorded file



- Press the [▶] button in recording standby mode to play the recorded file.



Note

- The recorded file is saved in following locations depending on the SOURCE.

Voice

My Recordings/Voice/VoiceYYMMDDXXX.MP3

Tuner

My Recordings/Tuner/TunerYYMMDDXXX.MP3

Line In

My Recordings/Audio/AudioYYMMDDXXX.MP3


(YYMMDD - Y : Year, M : Month, D : Day)

- Use the <BROWSER> menu to select and play files.

Viewing images

Viewing image supports JPG file.



Viewing image file




- Select the <PHOTO> mode using the [↑/↓] scroll from the main menu.



- Press the [○] button to display the Image list screen.

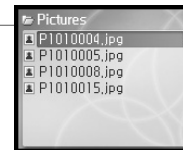

- Move to the desired image file using the [↑/↓] scroll in the Image list screen.

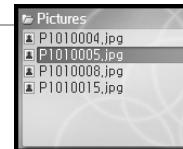

- Press the [○] button to display the Image screen.



Note

- Loading time for large images may take longer.
- The Progressive JPG is not supported in the Viewing image file function.

What is Progressive JPG?


Progressive JPG divides the file into a series of scans. The first scan shows the image at the equivalent of a very low quality setting, and therefore it takes very little space.

Following scans gradually improve the quality.



Viewing images

Viewing image supports JPG file.



5

Press the [◀/▶] button to move to previous/next image.

◀ : Moves to previous image
▶ : Moves to next image

Press the [▶] button to start slide show.

To stop the slide show, press the [◀] button again.



Getting images on the player

1

Connect the player and PC using the cable supplied with the player and power it on. (Refer to page 16.)

2

Open Windows Media Player.

- Click Start - All Programs - Accessories - Entertainment - Windows Media Player.
- Click "Library" from the menu button near the top of the screen.

Most of your images should be listed in this library.

If not, check Windows Media Player help for more information about the library.

3

Locate an image in the Library and Right-Click on it. Select "Add to - Sync List". A "Sync list" will appear on the right side of windows Media Player listing all the image files to be added to your player. Repeat for all the images you would like to add to your player.

4

Click the "Sync" menu button.

On the right side the Sync screen choose the H10 from the download list.

5

Click Start Sync to transfer the items on your Sync list to the player.

A progress indicator will show each file transferring.


When complete, copied images will appear in the "Synchronized to Device" list on the left side of Windows Media Player and in the specified folder on the right side of the screen.

Disconnect the player from your computer and enjoy your image!



Viewing text

Viewing text file





1

Select the <TEXT> mode using the [▲/▼] scroll when the main screen appears.




2

Press the [○] button to display the Text list screen.

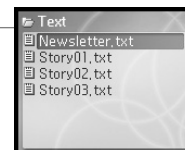



3

Move to the desired text file using the [▲/▼] scroll in the Text list screen.

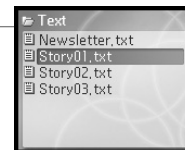


4

Press the [○] button to display the Text screen.

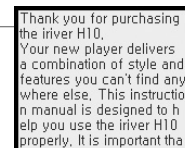

5

Use the [▲/▼] scroll to move to the previous/next line during reading text.

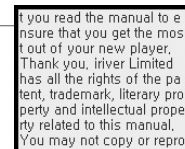

Viewing text

6 Use the [⏮/⏭] scroll to move to the previous/next page during reading text.

⏮ : Page up
⏭ : Page down

The software, audio and video which have an intellectual property are protected by copyright and international laws. It is user's responsibilities when he/she reproduce or distribute the contents created by this product. The co

7 Press the [○] button while viewing text to move to the desired page.

[⏮/⏭] : Selects the location
[↑/↓] : Selects the number
[○] : Moves to the desired page

Believing in Santa easy
Claus isn't easy wh steam
erve
ave
s ve
a ve
arve
Eve when he's awa steam
kened by a steam tra

Move To

0 2 7

002411270

Viewing text

Getting text files on the player

- 1 Connect the player and PC using the cable supplied with the player and power it on. (Refer to page 16.)
- 2 Open My Computer :
Windows XP : Start - My Computer
- 3 Locate your text (.TXT) files, keep this folder open.
- 4 Open a second My Computer window.
- 5 Double click on the H10 device then double click on the <Data> folder.
- 6 To get text on the player, click and drag the text files from your PC to the "Text" folder found inside the <Data> folder.
- 7 A progress window will appear while files are copying.
- 8 Disconnect the USB cable once all copying has finished.

Browser function

The Browser allows you to navigate all the files on the player. You can play titles, view images, or display text files without switching modes. Several advanced features of each mode will not be available, such as the image slide show, Artist and Genre searching, etc.

1 Select the <BROWSER> mode using the [↕] scroll on the main menu.

2 Press the [○] button to display all files in the player as a tree view.

Chapter 4 | Useful features

Settings Menu	
Settings Menu	54
Settings menu navigation	
Changing menu	55
Entering the sub menu	55
Customizing the function settings	56
Exit the sub menu	56
Menu settings	
Sound	57
Record	60
Timer	63
Extra	67




Settings Menu

Function control is subject to change with different firmware versions.

User can configure their own settings.


Some settings may be shown different if your H10 does not support FM radio.

(Some H10 models do not support FM radio.)

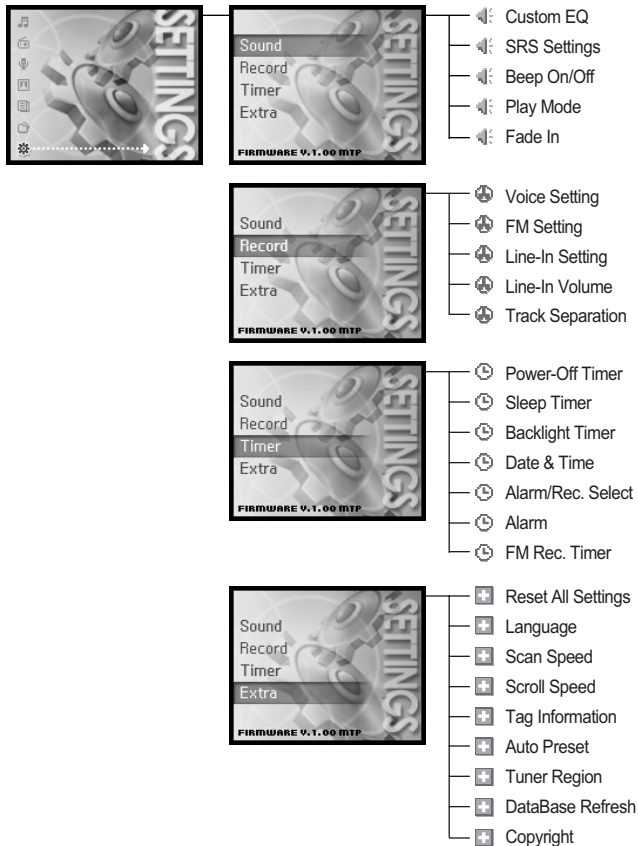


Settings menu navigation

Changing menu

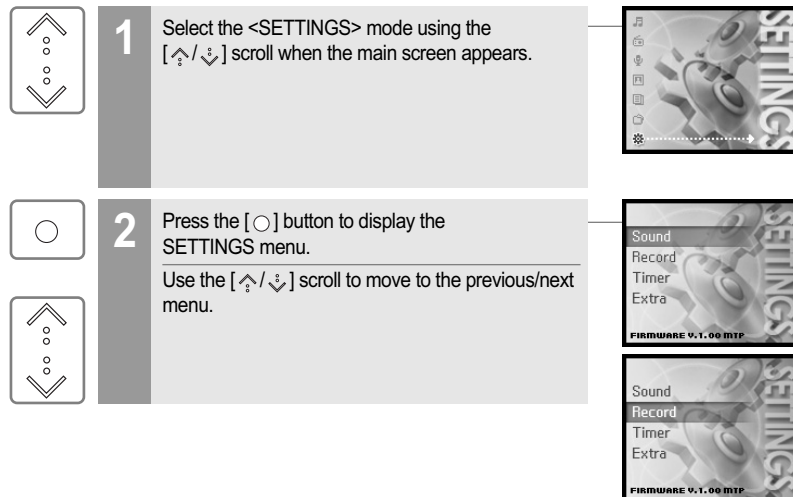


Entering the sub menu

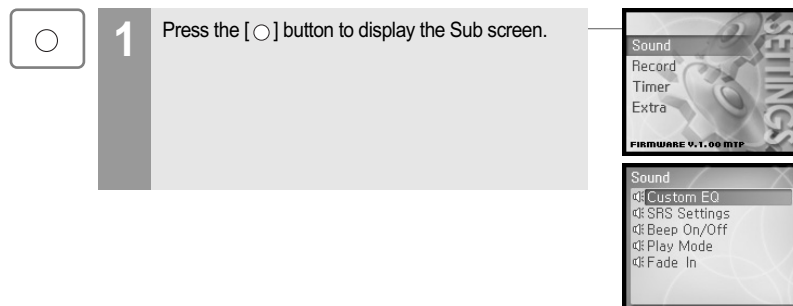

Settings menu navigation

Customizing the function settings




1 Use the [/] scroll on the main menu.





2 Press the [] button to display the contents of that sub menu.





3 Press the [/ , ] button to customize the function setting.



Exit the sub menu



1 Press the [] button to exit the sub menu.





Press and hold the [] button to return to the main menu.

Menu settings

Sound


1. Custom EQ

Various frequency bands can be selected and customized.

Each frequency level is from -12dB to 12dB in steps of 2dB.

[] : Changes frequency band

[/] : Selects frequency level

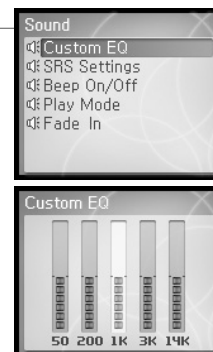

2. SRS Settings

Sets the level of 3D effect.


There are 4 types of 3D effect including Field Width, TruBass, FOCUS and Freq. Boost.

Field Width : Sets the Field width value.

TruBass : Sets the Trubass value.

FOCUS : Sets the sound resolution.

Freq. Boost : Sets the sound boost value.

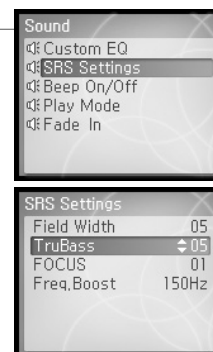



Menu settings

3. Beep On/Off

Sets the beep volume for moving cursor.

Select <On> or <Off> using the [/] scroll and press the [] button to confirm it.



4. Play Mode

Sets the Play mode.

(For more information about the Play mode, refer to page 32.)

The Play mode can be changed only in the <SETTINGS> – <Sound> – <Play Mode>.


Select the Play mode using the [/] scroll and press the [] button to confirm it.



Menu settings

5. Fade In

When activated, volume increases gradually at playback mode.

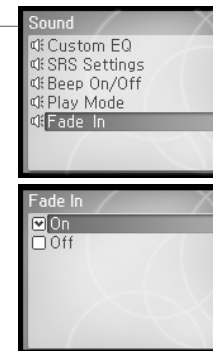



Menu settings


Some settings may be shown different if your H10 does not support FM radio.
(Some H10 models do not support FM radio.)

Record

1. Voice Setting

Sets the quality of voice recording.



Select <Low>, <Medium>, <High> using the [/] scroll and press the [] button to confirm it.

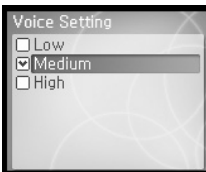

2. FM Setting

Sets the quality of FM recording.

Select <Low>, <Medium>, <High> using the [/] scroll and press the [] button to confirm it.

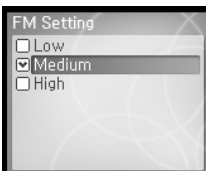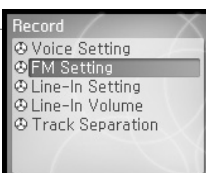


Menu settings

Some settings may be shown different if your H10 does not support FM radio.
(Some H10 models do not support FM radio.)

3. Line-In Setting

Sets the quality for recording from external device.

Select <Low>, <Medium>, <High> using the [/] scroll and press the [] button to confirm it.

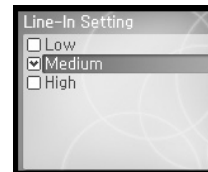


4. Line-In Volume

Controls volume for recording from external device.

<1 to 21> levels are available.

Select the volume using the [/] scroll and press the [] button to confirm it.

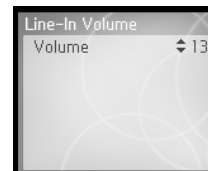



Menu settings

Some settings may be shown different if your H10 does not support FM radio.
(Some H10 models do not support FM radio.)

5. Track Separation

While recording from external device, if no sound occurs for around 1.5 seconds, a new file will be created.

If you use the <Track Separation> function with connecting external devices such as CD or tape, each track will be save to an individual file.

Select <On> or <Off> using the [/] scroll and press the [] button to confirm it.



Menu settings

Some settings may be shown different if your H10 does not support FM radio.
(Some H10 models do not support FM radio.)


Timer

1. Power-Off Timer

Automatically turns the power off at stop mode after fixed time.

The available time settings are <Off>, <10 Sec.>, <30 Sec.>, <1 Min.>, <5 Min.>, <10 Min.>.

Select the time using the [/] scroll and press the [] button to confirm it.

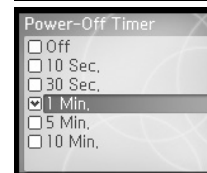


2. Sleep Timer

Automatically turns the power off after fixed time.

The available time settings are <Off>, <10 Min.>, <30 Min.>, <1 Hour>, <2 Hours>, <5 Hours> and if it is set to <Off>, the power will not be turned off.

Select the time using the [/] scroll and press the [] button to confirm it.

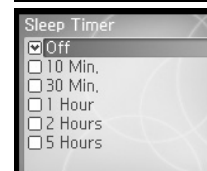



Menu settings

Some settings may be shown different if your H10 does not support FM radio.
(Some H10 models do not support FM radio.)

3. Backlight Timer

Sets the time that the backlight stays on.

The available time settings are <Always On>, <5 Sec.>, <30 Sec.>, <1 Min.>, <5 Min.>, <30 Min.>.

Select the time using the [/] scroll and press the [] button to confirm it.




4. Date & Time

Sets the current time.

[] : Selects item

[/] : Sets the current time

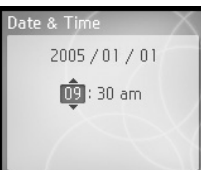

Menu settings

Some settings may be shown different if your H10 does not support FM radio.
(Some H10 models do not support FM radio.)

5. Alarm/Rec. Select

Sets the time to activate the alarm function or the FM Rec Timer.

Select <Off>, <Alarm>, <FM Rec.> using the [/] scroll and press the [] button to confirm it.

Note

■ Be sure to set the date and time prior to using timed FM recording or the Alarm function.




6. Alarm

Sets the time to activate the alarm function.


[] : Selects item

[/] : Sets the time for alarm

If your H10 does not support FM radio; Sets the alarm time.

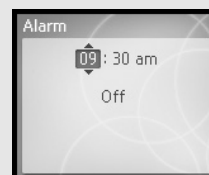

Select the time using the [/] scroll and press the [] button to confirm it.
Then select <On> using the [/] scroll and press the [] button to activate the alarm function.

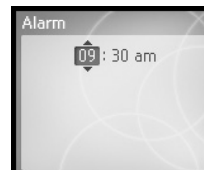



Menu settings


Some settings may be shown different if your H10 does not support FM radio.
(Some H10 models do not support FM radio.)

7. FM Rec. Timer

Sets the time to activate FM radio recording.

[○] : Selects item

[↑/↓] : Sets the time for recording

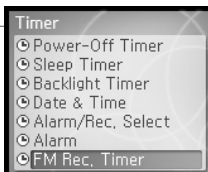

Menu settings



Some settings may be shown different if your H10 does not support FM radio.
(Some H10 models do not support FM radio.)

Extra

1. Reset All Settings

Initializes all settings to original factory setting (if Yes is selected).

Select <Yes> or <No> using the [↑/↓] scroll and press the [○] button to confirm it.

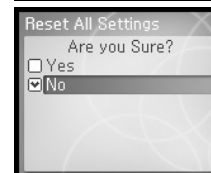
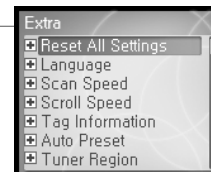


2. Language

Select the language to match the language of your music ID3 tags for proper display.

40 languages are supported in this function.

Select the language using the [↑/↓] scroll and press the [○] button to confirm it.

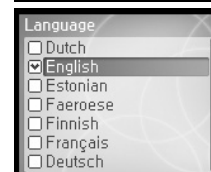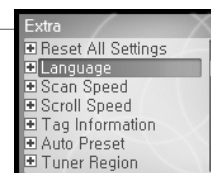



Menu settings


Some settings may be shown different if your H10 does not support FM radio.
(Some H10 models do not support FM radio.)

3. Scan Speed

Sets the speed of fast scan.

The available speed range are <1X>, <2X>, <4X>, <6X>.

Select the speed using the [/] scroll and press the [] button to confirm it.

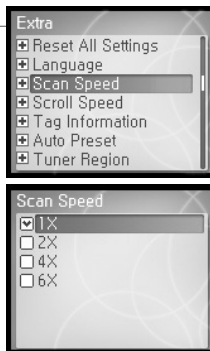


4. Scroll Speed

You can adjust the scroll speed (Title or Artist Name of the song) displayed on the LCD.

The available speed range are <1X>, <2X>, <4X>.

Select the speed using the [/] scroll and press the [] button to confirm it.

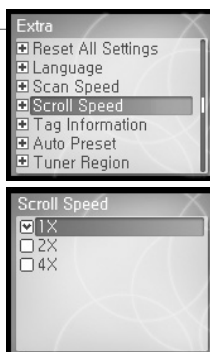

Menu settings


Some settings may be shown different if your H10 does not support FM radio.
(Some H10 models do not support FM radio.)

5. Tag Information

Displays file information with ID3 Tag information and changes the configuration of Tag information.

<Off>, only the file name will display.


Select <On> or <Off> using the [/] scroll and press the [] button to confirm it.

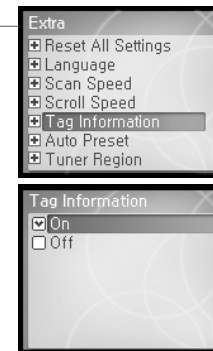

6. Auto Preset

You can tune and store FM radio stations automatically.

Select <Yes> or <No> using the [/] scroll and press the [] button to confirm it.

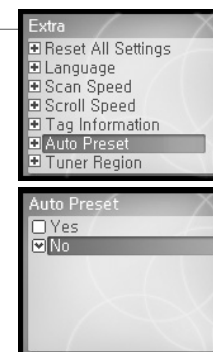



Menu settings

Some settings may be shown different if your H10 does not support FM radio.
(Some H10 models do not support FM radio.)

7. Tuner Region

You can tune the FM radio station and choose the step by the region. Set the tuner region to match your area for best reception.

The available regions are <Korea>, <Japan>, <Europe> and <USA>.


- [/] : Sets up the available region
[] : Selects the region



8. DataBase Refresh

Restores the database when it is damaged or corrupted.

Select <Yes> using the [/] scroll and press the [] button to confirm it.

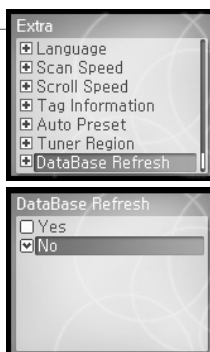

Menu settings

Some settings may be shown different if your H10 does not support FM radio.
(Some H10 models do not support FM radio.)

9. Copyright

Press the [] button to see copyright information.



iriver 

Chapter 5 | Additional information

Troubleshooting 74



Troubleshooting



Troubleshooting

Some H10 models do not support FM radio.

Symptom	Possible solutions
The player will not power on.	■ Check whether the battery is discharged. ■ Check it again after connecting the AC adapter. ■ If the power is still turned on after charging, please contact iriver customer support. ■ Press the Reset button using a pin.
No sound during playback.	■ Check whether volume is set to "0". ■ Connect the earphones plug firmly.
Buttons do not work.	■ Check whether the HOLD switch on the player is ON. Switch it to OFF position and try it again.
Noise and distortion during playback.	■ Check whether the plug or connection jack of earphone is dirty. Dirty connectors may cause noise. ■ Check whether the music file is corrupted. Check it again with other music file. If the file data is corrupted, noise or distortion may result.
Characters in LCD are corrupted.	■ Check whether the right language is selected. The language setting can be changed in <SETTINGS> - <Extra> - <Language>.

Symptom	Possible solutions
Poor radio reception.	■ Check whether an earphone is connected. Earphone cord functions as an antenna during radio reception. Radio reception will be poor unless an earphone is attached to the player. ■ Adjust the position of the player and earphone. ■ Turn off any nearby electronic equipment to avoid possible interference. If it is effective, move and use the player away from those sources.
Failed download.	■ Check whether the USB cable is firmly connected.
The titles saved in H10 are not played.	■ Audio titles listed under <MUSIC> will only play if they were loaded using Windows Media Player. Use the BROWSER function to locate and play your files. ■ If the files still do not play, it is possible they are in a format not compatible with this player. Please consult with the program or service used to originally retrieve the titles. ■ H10 supports up to 1000 music, image and text files.



 Chapter 6 I Appendix

Specifications	78
FCC	79



Specifications

Category	Item	Specifications
Memory	Capacity	512MB / 1GB / 2GB *
	File system	FAT 16 / FAT 32
PC	Supported OS	Windows XP (Service Pack 1 or higher)
	Interface	USB 2.0
Audio	Frequency range	20Hz~20KHz
	Headphone output	14mW (L) + 14mW (R) at 16Ω Max. Volume
	S/N ratio	90dB(MP3)
	Frequency range	± 3dB
	No. of channels	Stereo (L/R)
FM radio***	FM frequency range	87.5MHz ~ 108MHz
	S/N ratio	60dB
	Antenna	Headphone / Earphone cord antenna
File support	File type	MP3(MPEG 1/2/2.5 Layer3), WMA, OGG, ASF, TXT, JPG**
	Bit Rate	MP3 : 8Kbps~320Kbps WMA : 8Kbps~320Kbps OGG : Q1~Q10
	Tag	ID3 V1, ID3 V2 2.0, ID3 V2 3.0, ID3 V2 4.0
Power supply	Battery	3.7V Lithium Polymer Battery
General	Dimensions	71.8 X 42.5 X 16 (mm)
	Weight	Approx. 50g
	LCD	260,000-color 1.2" Graphic LTPS (Low Temperature Poly Silicon) LCD
	Operational temperature	0 °C ~ 40 °C
	Max. playtime	Approx. 40 hours (When used with 128 Kbps, MP3, 20 Volume level, EQ Normal, LCD off)

* 1MB = 1,000,000 Bytes
1GB = 1,000 MB = 1,000,000,000 Byte
Not all memory available for storage.

** The Progressive JPG is not supported.

*** Some H10 models do not support FM radio.



FCC

Federal Communications Commission (FCC)

The device manufactured and found to comply with limits for a Class B computing device according to the specifications in FCC rules Part 15. Operation is subject to the following two conditions;

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.
3. If your device needs repairs, you must arrange for the manufacturer to make them if you are to keep the device's FCC registration valid.

This equipment, like other electronic equipment, generates and uses radio frequency energy. If not installed and used according to the instructions in this manual, this equipment may cause interference with your radio and television reception.

If you think this equipment is causing interference with your radio or television reception, try turning the equipment off and on. If the interference problems stop when the equipment is switched off, then the equipment is probably causing the interference. You may be able to correct the problem by doing one or more of the following:

- Adjust the position of the radio or TV antenna
- Move away the device from the radio or TV

If necessary, consult your dealer or an experienced radio or television technician. You may find this booklet helpful: "How to Identify and Resolve Radio and TV Interference Problems" (Stock No. 004-000-00345-4), prepared by the FCC and available from the U.S. Government Printing Office, Washington, DC 20402. See individual devices FCC ID and registration numbers.

For the customers in Europe



The CE mark on the CD player is valid only for products marketed in the European Union.

